

NaviDocs Test Manual

Page 1

Bilge Pump Maintenance

Bilge pump is located in the aft compartment. Annual maintenance is required every 6 months.

Electrical System

Check the battery connections regularly.